



*AlohaAc.com Operating Instructions For Humidistat & Thermostat Comfort Control*

Home settings – Above picture – When home set the Humidistat to “ON” and Thermostat to the desired temperature for your preferred comfort level.

Away settings – Below picture – When away set the Humidistat to 65% and the Thermostat to 72 Deg.

